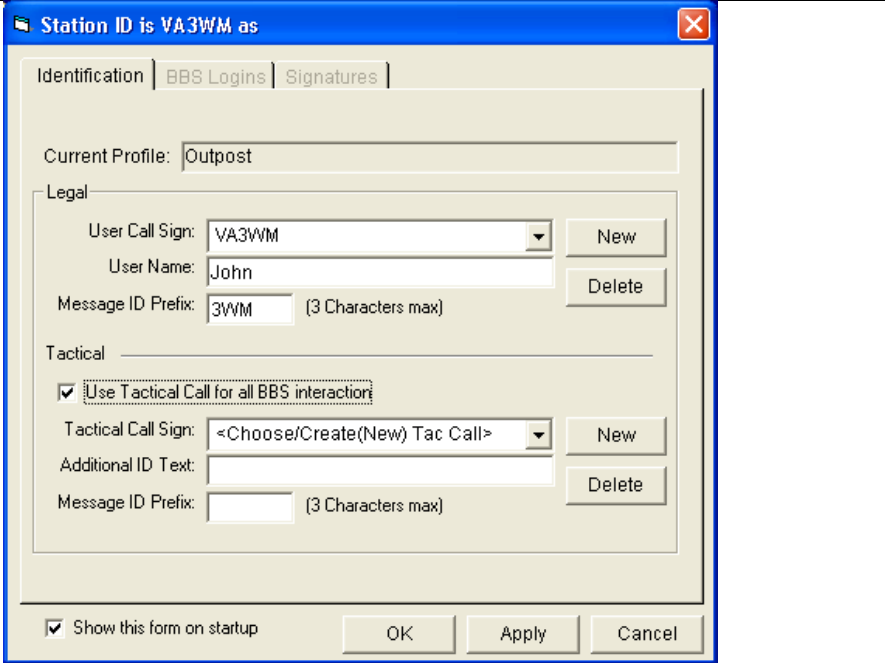
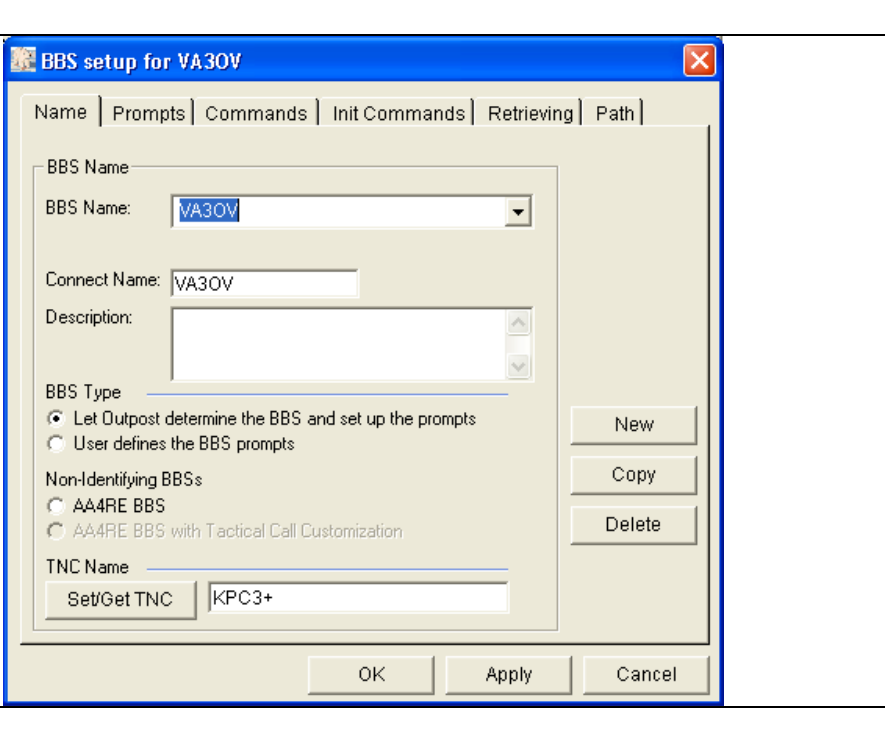


Note: Two BBS' need to be setup, VA3OV for packet BBS messaging and VA3OV-10 for Winlink smtp messaging. Frequency 145.060.

Make sure you are using the most recent version of Outpost <http://outpostpm.org/index.php>.

<p>1. Upon first Outpost startup, create your station id, normally your callsign</p>	
<p>2. BBS setup for BBS messaging. For first time setup, push New button and enter <u>VA3-OV</u>. Enter Connect Name <u>VA3OV</u>. Push Set/Get TNC button and complete panel.</p>	

3. BBS setup for Winlink messaging 1/2. push **New** button and enter VA3OV-Winlink. Enter Connect Name VA3OV-10. Push **Set/Get TNC** button and complete panel.

The screenshot shows a dialog box titled "BBS setup for VA3OV-Winlink" with tabs for Name, Prompts, Commands, Init Commands, Retrieving, and Path. The "Name" tab is active. It contains the following fields and options:

- BBS Name: A dropdown menu with "VA3OV-Winlink" selected.
- Connect Name: A text box containing "VA3OV-10".
- Description: An empty text box with up and down arrow buttons.
- BBS Type: A radio button selected for "Let Outpost determine the BBS and set up the prompts".
- Non-Identifying BBSs: Radio buttons for "AA4RE BBS" and "AA4RE BBS with Tactical Call Customization".
- TNC Name: A text box containing "KPC3+" with a "Set/Get TNC" button to its left.
- Buttons: "New", "Copy", and "Delete" on the right side.
- Bottom buttons: "OK", "Apply", and "Cancel".

4. BBS setup for Winlink messaging 2/2. For first time setup, push **New** button. Enter your User Login and case sensitive Winlink password. You can use the **Show** button to see what's under the asterisks.

The screenshot shows a dialog box titled "Station ID is VA3WM" with tabs for Identification, BBS Logins, and Signatures. The "BBS Logins" tab is active. It contains the following fields and options:

- Manage password access to specific BBSs: A section with "BBS logins for: VA3WM" and buttons for "New", "Change", and "Delete".
- Table of logins:

Log on as...	BBS Friendly Name
VA3WM	VA3OV-Winlink
- BBS Name: A text box containing "VA3OV-Winlink".
- User Logon: A text box containing "VA3WM".
- User/Connect Password: A text box with asterisks, a "Show" button to its right.
- Winlink Account Password: A text box with asterisks.
- Description: An empty text box with up and down arrow buttons.
- Buttons: "Update" and "Cancel" on the right side.
- Bottom buttons: "OK", "Apply", and "Cancel".
- Checkbox: "Show this form on startup" is checked.

5. New packet message using Winlink. Prefix internet e-mail addresses with **smtp**:

